

General Safety Information

⚠ WARNING

- Before use, check the wheels to make sure that there are no bent or loose spokes, dents, scratches or cracks on the rim surface. Do not use the wheel if any of these problems are found.
- Do not use in combination with bottom link-type suspension forks. With these types of forks, the clearance between the hub axle and the brake shoes can change due to the operation of the suspension, so that when the brakes are applied, the brake shoes may touch the spokes.
- If the quick release mechanism is not used correctly, the wheel may come off the bicycle and serious injury could result. Read the Service Instructions for the quick release mechanism thoroughly before use.
- Use rim cement to securely affix tubular tires to the rims. If the tires are not fully secure, they may come off the rims, and serious accidents and injury may result.
- These wheels are designed for riding on paved surfaces. If the wheels are used on unpaved surfaces, the wheels may become bent or damaged, and accidents may result.
- Check that the wheels are fastened securely before riding the bicycle. If the wheels are loose in any way, they may come off the bicycle and serious injury may result.
- Obtain and read the service instructions carefully prior to installing the parts.** Loose, worn or damaged parts may cause the bicycle to fall over and serious injury may occur as a result. We strongly recommend only using genuine Shimano replacement parts.
- If the braking surfaces of the carbon fiber rims become extremely worn and the rims appear to have become deformed, stop riding the bicycle. If you continue to ride the bicycle in this condition, it may fall over and serious injury may occur as a result.
- Read these Technical Service Instructions carefully, and keep them in a safe place for later reference.

⚠ CAUTION

- The tires should be inflated to the pressure indicated on the tires before use.
- Carbon fiber rims become worn due to friction from the brake shoes, and there may be a "run-in" period before the full performance of the rims can be obtained. As the run-in period progresses, the braking force will become stronger. You should take note of the increase in braking force during this time to ensure proper safety.

NOTICE

- Use R55C3 carbonfiber rim brake shoes with the WH-7900-C35-TU. If brake shoes such as the R55C standard shoes or R55C high-performance shoes are used, the braking force provided by the brakes may be insufficient, or the brake shoes may become abnormally worn. Shimano accepts no responsibility for reduced rim life which might occur from using R55HC brake shoes.
- Use of genuine Shimano spokes and nipples is strongly recommended. If non-Shimano parts are used, the area where the spokes fit into the hub unit may become damaged.
- Before use, check that there are no pieces of metal or other foreign objects sticking to the brake pads. If any such items are present, they may cause damage to the rim when the brakes are applied. Do not use an R55C3 carbon rim brake shoe which has already been used with an aluminum rim for a carbon rim again. Using the shoe on an aluminum rim will cause aluminum wear powder to be stuck on the brake shoe, which will damage the brake friction surface of the carbon rim.
- The nipples have large diameters and are easy to rotate in order to make it easier to increase the spoke tension. However, be careful not to overtighten the nipples when adjusting the spoke tensions. If the nipples are overtightened, damage to the rim may result. (We recommended that you ask authorized bicycle dealers to make the adjustments.)

Note:

- If the wheel becomes stiff and difficult to turn, you should lubricate it with grease.
- Do not apply any oil to the inside of the hub, otherwise the grease will come out.
- Special spoke wrenches are available as optional accessories.
- We recommend that you ask authorized bicycle dealers to adjust the spoke tensions if there is any initial play in the spokes and after the first 1,000 km of riding.
- Spoke protectors (CP-WH23) are also sold separately. Please ask your bicycle dealer for details.
- For maximum performance we highly recommend Shimano lubricants and maintenance products.
- Reflectors (manufactured by CATEYE) are also sold separately. Please ask your bicycle dealer for details.

Model number	Specification	Color
RR-550-WUWSW	CPSC	White
RR-550-WUASW	AS	Amber
RR-317-WUASW	DIN	Amber

- Parts are not guaranteed against natural wear or deterioration resulting from normal use.

Technical Service Instructions

SI-4G90A-003

WH-7900-C35-TU

Wheel

In order to realize the best performance, we recommend that the following combination be used.

Applicable tire size	Tubular tire	
	700C	
Chain	10-speed	CN-7901
Cassette sprocket	10-speed	CS-7900

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
This wheel can be used with 8-gear, 9-gear and 10-gear sprocket sets. (If using a 10-gear sprocket set other than for a junior bicycle, use the accessory 1-mm spacer.) Refer to the Product Technical Information for details on combination with other parts such as chains and cassette sprockets.

Specifications

Series	DURA-ACE	
Model number	WH-7900-C35-TU	
Speeds	8 / 9 / 10	
Rim size	700C	
Rim width	20.8 mm	
Rim height	For front	35 mm
	For rear	35 mm


Cassette sprocket

Sprockets marked by  are secured.


Model No.	CS-7900		
	11T - 21T	11T, 12T, 13T, 14T, 15T, 16T,  17T,  18T,  19T, 21T	
	11T - 23T	11T, 12T, 13T, 14T, 15T, 16T,  17T,  19T,  21T, 23T	
	11T - 25T	11T, 12T, 13T, 14T, 15T,  17T,  19T,  21T, 23T, 25T	
Sprocket tooth configuration	11T - 27T	11T, 12T, 13T, 14T, 15T,  17T,  19T,  21T, 24T, 27T	
	11T - 28T	11T, 12T, 13T, 14T, 15T,  17T,  19T,  21T, 24T, 28T	
	12T - 23T	12T, 13T, 14T, 15T, 16T,  17T,  18T,  19T, 21T, 23T	
	12T - 25T	12T, 13T, 14T, 15T, 16T,  17T,  19T,  21T, 23T, 25T	
	12T - 27T	12T, 13T, 14T, 15T, 16T,  17T,  19T,  21T, 24T, 27T	

Replacing the spokes

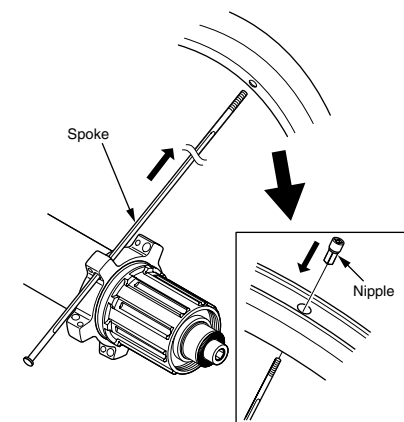Hook the spokes through the hub as shown in the illustration to install them.



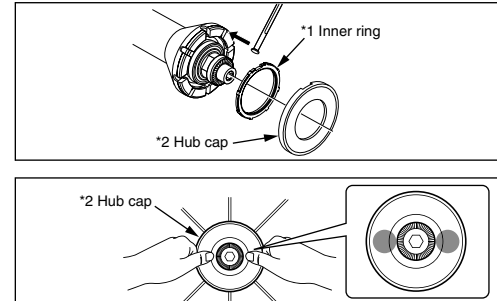
At the front, fit the heads of the spokes securely into the slots in the hub unit, otherwise damage may occur.



- Install the inner ring so that it is fully set inside the tabs of the hub unit.
- Install the hub cap properly so that the tabs are fit completely into the inner ring by pressing it in until it clicks and then making sure that it cannot be detached by hand before using it.

Replacement of the freewheel body

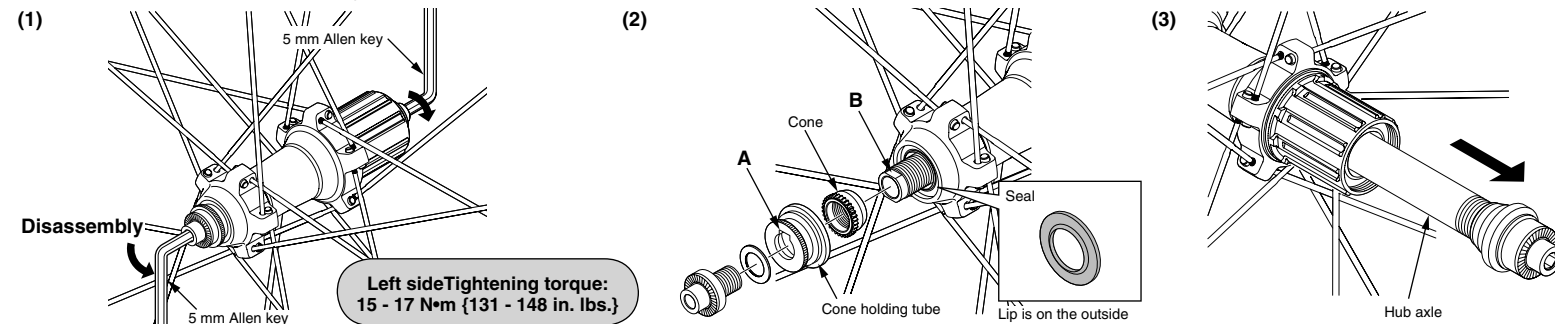First, pull out the hub axle by following the procedure shown in the illustration. Disassembly from the freewheel side is not possible.



Note:

- When removing and installing the seal, do it very carefully so that the seal does not become bent. When reinstalling the seal, make sure that it is facing the right way, and insert it as far as it will go.
- Tighten the cone onto the hub axle until it has no looseness. While aligning the knurls of the cone and the knurls of the cone holding tube, align section A of the cone holding tube with section B on the hub axle.

After removing the hub axle, remove the freewheel body fixing bolt (inside the freewheel body), and then replace the freewheel body.

Note:

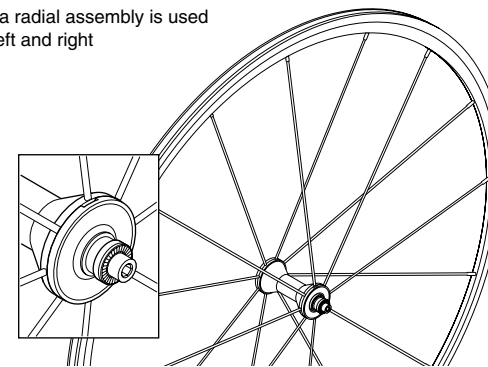
When replacing the freewheel body, replace the freewheel body fixing bolt at the same time. Be sure to apply grease to the thread of the freewheel body fixing bolt, otherwise looseness or sticking may occur. Do not disassemble the freewheel or apply oil or grease to it, otherwise problems with operation may occur.

Spoke lacing

Lace the spokes as shown in the illustration.


(For front)

At the front, a radial assembly is used at both the left and right



(For rear)

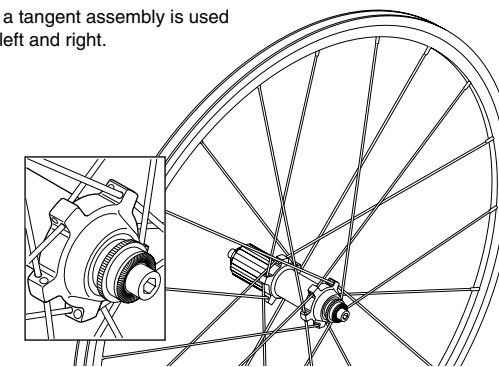At the rear, a tangent assembly is used at both the left and right.




Spoke tension value		
For front	For rear	
	Right (sprocket) side	Left side
1000 - 1400 N (225 - 315 lbf)	1200 - 1500 N (270 - 338 lbf)	600 - 900 N (135 - 203 lbf)

* These values should be used as a guide only.


Installation of the HG sprockets

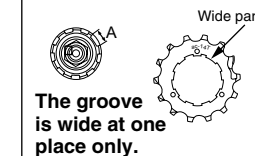For each sprocket, the surface that has the group mark should face outward and be positioned so that the wide parts of the gear projections on each sprocket and the A part (where the groove width is wide) of the freewheel body are aligned.




When installing the CS-7900 (10-gears) freewheel, install a spacer in the position shown in the illustration.

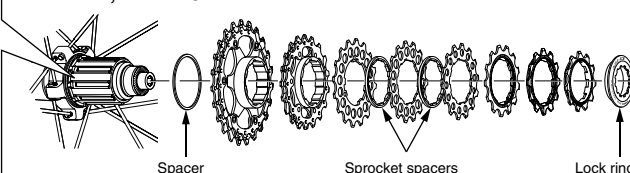
11T - 21T, 11T - 23T



11T - 25T, 11T - 27T, 11T - 28T

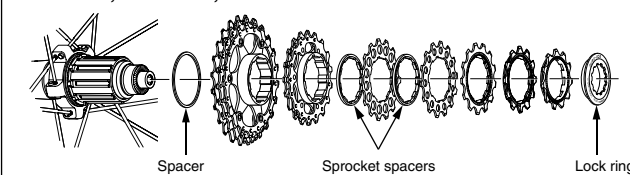



12T - 23T, 12T - 25T, 12T - 27T

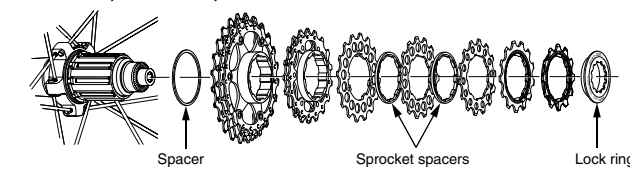

For installation of the HG sprockets, use the special tool (TL-LR15) to tighten the lock ring.

Tightening torque:
30 - 50 N·m
{261 - 435 in. lbs.}

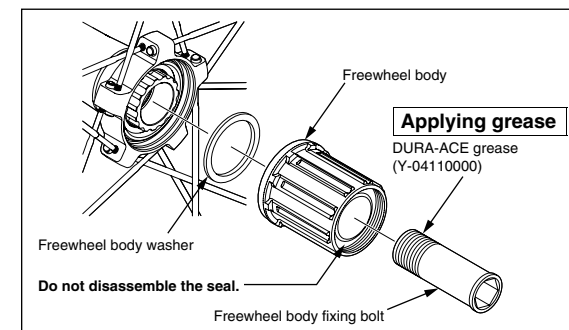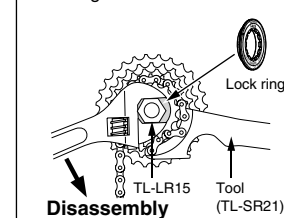To replace the HG sprockets, use the special tool (TL-LR15) and TL-SR21 to remove the lock ring.



These service instructions explain how to use and maintain the Shimano bicycle parts which have been used on your new bicycle. For any questions regarding your bicycle or other matters which are not related to Shimano parts, please contact the place of purchase or the bicycle manufacturer.

* Service Instructions in further languages are available at :

<http://techdocs.shimano.com>

Please note: specifications are subject to change for improvement without notice. (English)

SHIMANO

SHIMANO AMERICAN CORPORATION
One Holland, Irvine, California 92618, U.S.A. Phone: +1-949-951-5003

SHIMANO EUROPE B.V.

Industrieweg 24, 8071 CT Nunspeet, The Netherlands Phone: +31-341-272222 3-77 Omatsu-cho, Sakai-shi, Osaka 590-8577, Japan

SHIMANO INC.

© Aug. 2010 by Shimano Inc. AWS. SZK Printed in Japan.